



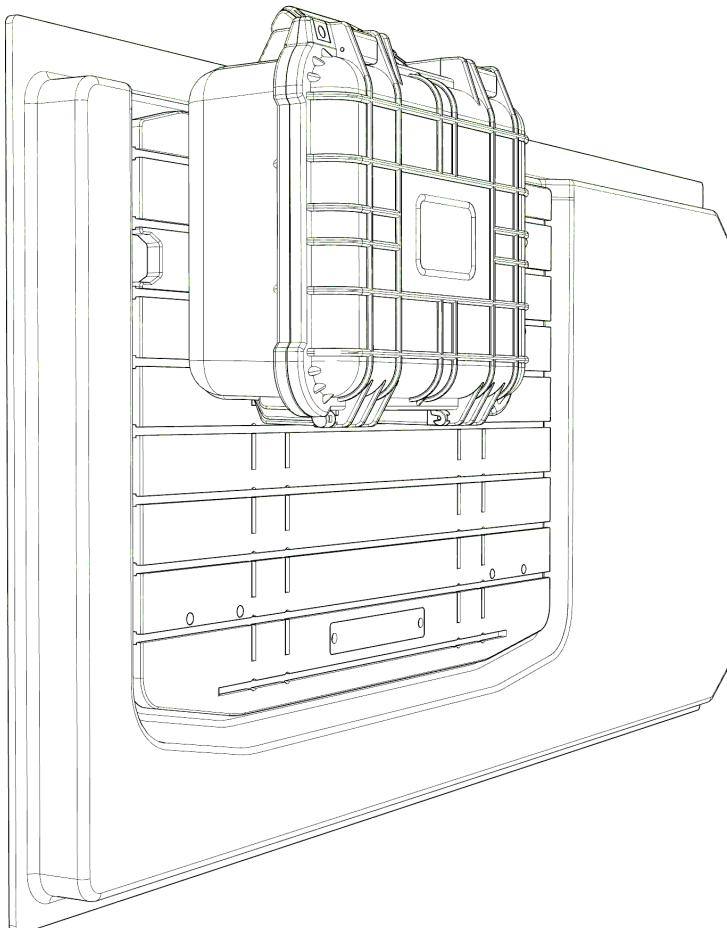

## MODWALL CASE ADAPTERS


1

Locate the desired location on your case to install the Case Plate adapter in the orientation that fits your case best. (For vehicle applications, check with STEP 2 before drilling) Drill thru the adapter with 5/32nds drill bit into the case from the outside. Fasten with provided hardware from inside of the case into the case adapter. Use grommets/gaskets (not included) between fasteners to help with waterproofing if needed.

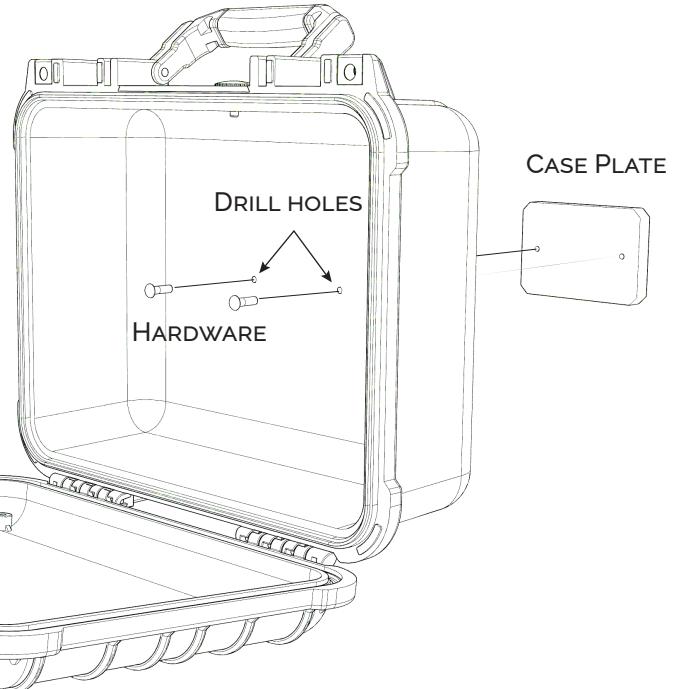

2

For vehicle applications, please make sure that the placement of your case, when fully seated on your VMod panel, does not interfere with split-windows or door clearances. Align your case adapter onto your case so that nothing is obstructed.

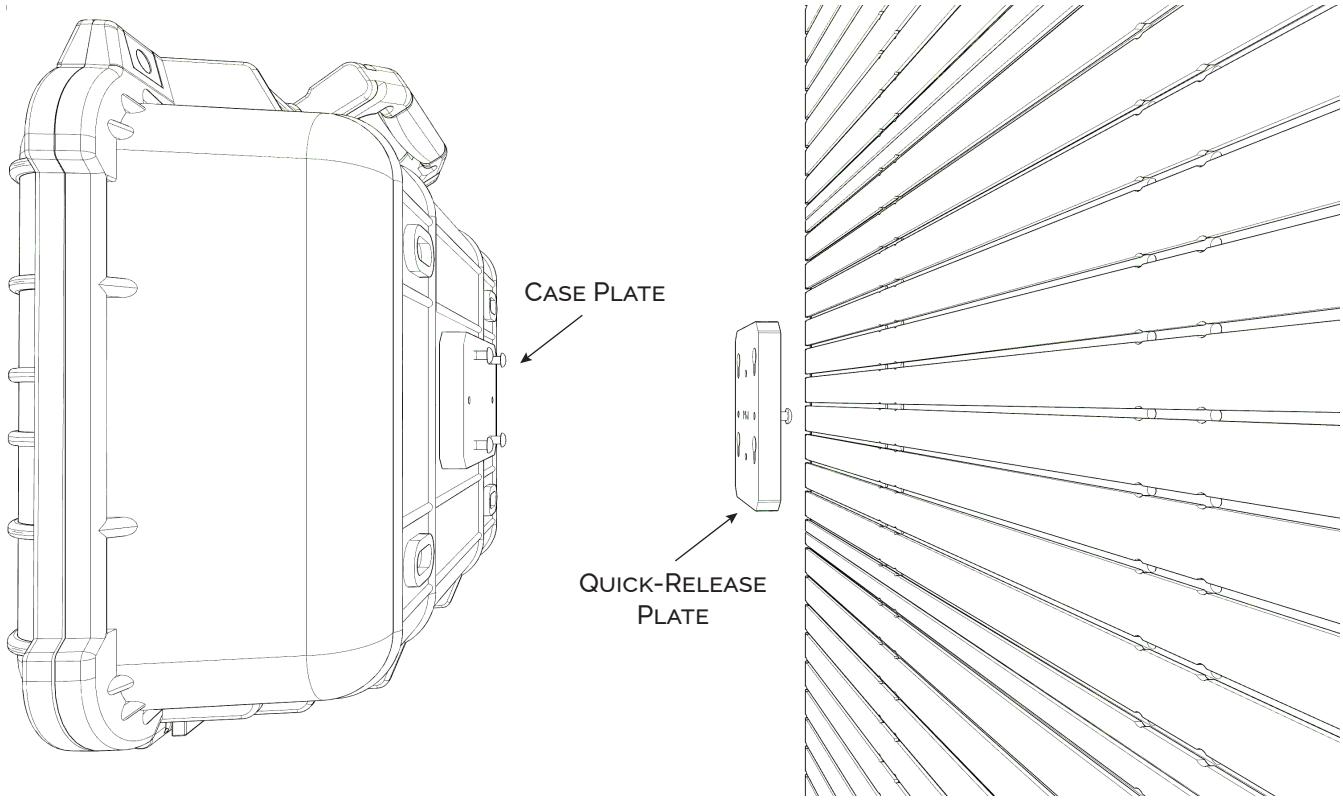


3

Now you can use your Quick-Release Plate to easily mount your Case Plate-equipped case onto your ModWall system with ease. Simply slide the Quick-Release Plate onto your ModWall panel and drop in your case. Using the Quick-Release Plate is an optional feature, it just adds more convenience to the package.

4

The Quick-Release Plate can also be used for direct-to-wall applications. Remove the button-head screws on back of plate first. Drill thru the vertical holes on the Quick-Release Plate into a wall stud to store your case with minimalism and ease.

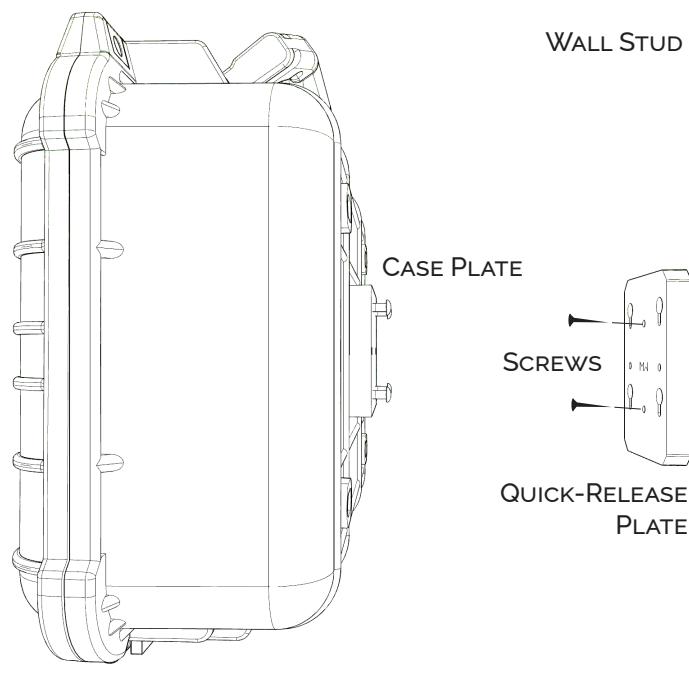

Share your setup with us and the world!



[support@tacticalwalls.com](mailto:support@tacticalwalls.com)

TACTICALWALLS.COM